

1. FOR MODEL YEAR 2014-PRESENT MOTORCYCLES BAG SPACERS MUST BE ADDED TO KEEP THE BAGS FROM TOUCHING THE SHOCKS. INSERT THE INCLUDED QUARTER TURN FASTENER WITH INCLUDED WASHER THROUGH THE GROMMET IN THE BAG. SLIDE INCLUDED SPACER OVER THE FASTENER ON THE OTHER SIDE OF THE BAG. INSTALL THE INCLUDED O-RING INTO THE GROOVE IN THE FASTENER. THE O-RING WILL KEEP THE SPACER FROM FALLING OFF THE FASTENER WHEN THE BAGS ARE REMOVED. (FIGURES 1, 2, 3, 4)



FIGURE 1



FIGURE 2



FIGURE 2



FIGURE 4

2. THE QUARTER TURN FASTENERS ARE NOT NEEDED IF THE BAGS ARE HELD IN PLACE WITH SCREW STYLE MOUNTS FROM THE FACTORY. SIMPLY SLIDE THE SPACER OVER THE SCREW AND USE THE O-RING TO KEEP THE SPACER IN PLACE. (FIGURES 5, 6, 7, 8)



FIGURE 5

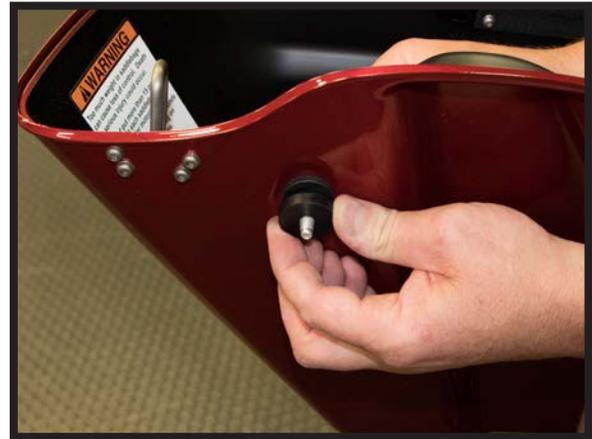


FIGURE 6



FIGURE 7

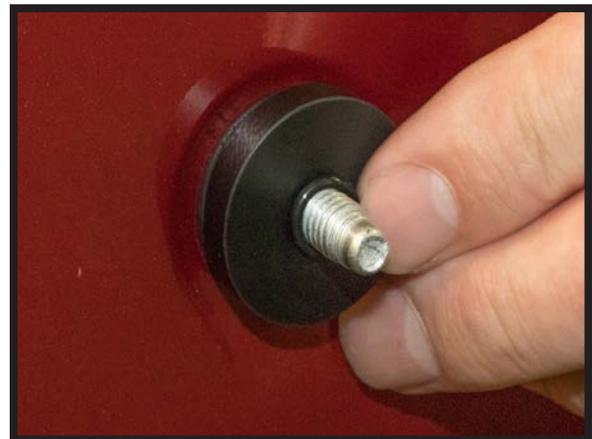


FIGURE 8